

## Using Easypack Plus with the Denso BHT- 8000 for Simple Stocktaking

### Introduction

This Application Note details the setup and operation of Denso's Easypack Plus software, used on the Denso BHT-8000 series of batch terminals, for simple stocktaking.

### Creation of an empty stocktake file

Once the Easypack Plus software has been downloaded onto the BHT-8000 execute the program "EASYPACK.PD3"

To achieve this, with the BHT-8000 powered off, press and hold **SF** & **1**, then press **PW**. Release the keys once the System Menu is displayed and press **1** then **ENT**. Using the **F5** & **F6** keys to navigate up and down if necessary, highlight "EASYPACK.PD3" and press **ENT**.

**NOTE:** Easypack Plus is a separate application from Denso and must be purchased separately.

Press the **SF** and **F4** keys together to enter the Administration Menu

Press **1** to create a new file

Press **1** again to create file 1 (upto 4 files can be created and used on the terminal)

Press **ENT** to dissable entry requirement of a user ID

Press **1 ENT** to dissable the recording of a date and time for every record collected

Press **ENT** to enable the display of the number of records collected so far in a file

Press **2 ENT** to dissable the display of the current time

Press **1 ENT** to enable the use of Data Item Names

Press **2 ENT** to specify 2 fields per record

Press the **F6** key until PROD. CODE is highlighted and press **ENT** (note: PROD. CODE is in the 2<sup>nd</sup> alphabetical listing)

Press **1 ENT** enable the entry of the Product code by either the Barcode Reader or the terminal keypad

Press **7 ENT** to enable all barcode types to be read

Press **2** **ENT** to dissable the use of EAN Add-ons

Press **2** **ENT** to dissable checkdigits

Press **6** **ENT** to set the minimum allowable length of a Product code to 6 digits

Press **2** **0** **ENT** to set the maximum allowable length of a Product code to 20 digits

Press the **F6** key until QUANTITY is highlighted and press **ENT** (note: QUANTITY is in the 2<sup>nd</sup> alphabetical listing)

Press **3** **ENT** to enable Quantity only to be entered from the terminal keypad

Press **1** **ENT** to set the minimum allowable length of Quantity to 1 digits

Press **8** **ENT** to set the maximum allowable length of Quantity to 8 digits

Creation of an empty stocktake file is now complete

***If a mistake is made at any point in the process **F1** and begin again from the start***

## ***Collecting Data***

Press **F1** to enter the Main Operations Menu

Press **2** to select which stocktake file to use

Press **1** to select the 1<sup>st</sup> file

Press **1** to begin collecting data (PROD. CODE will appear at the top of the display)

Scan the first barcode (barcode data will appear and QUANTITY will appear below)

Enter the Quantity value at the keypad and press **ENT**

Scan the next barcode

## ***Uploading the Collected Data***

Once you have completed collecting your data, press **F1** to return to the Main Operations Menu, then **3** to select transmit file and **1** to send the file to the PC. (The Denso Transfer Utility (TSR-TU3A) will need to have been installed onto the PC and be running, waiting to receive this file).

### ***Notes:***

This is a recommended method of developing a simple stocktaking solution with EasyPack Plus and the BHT-8000. Alternative or additional features can be selected, in the setup phase, to provide a solution more tailored to your needs, with a little exploration of EasyPack Plus. The output provided by this program is of the fixed length variety. ie the data is padded with spaces if it does not fill a field. For example, where 6 is set for the quantity field and a quantity of 1 is entered, the remainder of the field is filled with spaces – there is no seperater character used between fields .